

Prest in Control Terminal

The system internal has a core board, which original IP is 192.168.100.100

In order to connect with the device, the controlling terminal (computer) needs to preset as below:




Connecting between the device and RJ45 cable.

Check computer network connection, and there will be an unrecognized Ethernet connection shown.



Choose it, and right click to choose "Attribute", and shown as below:

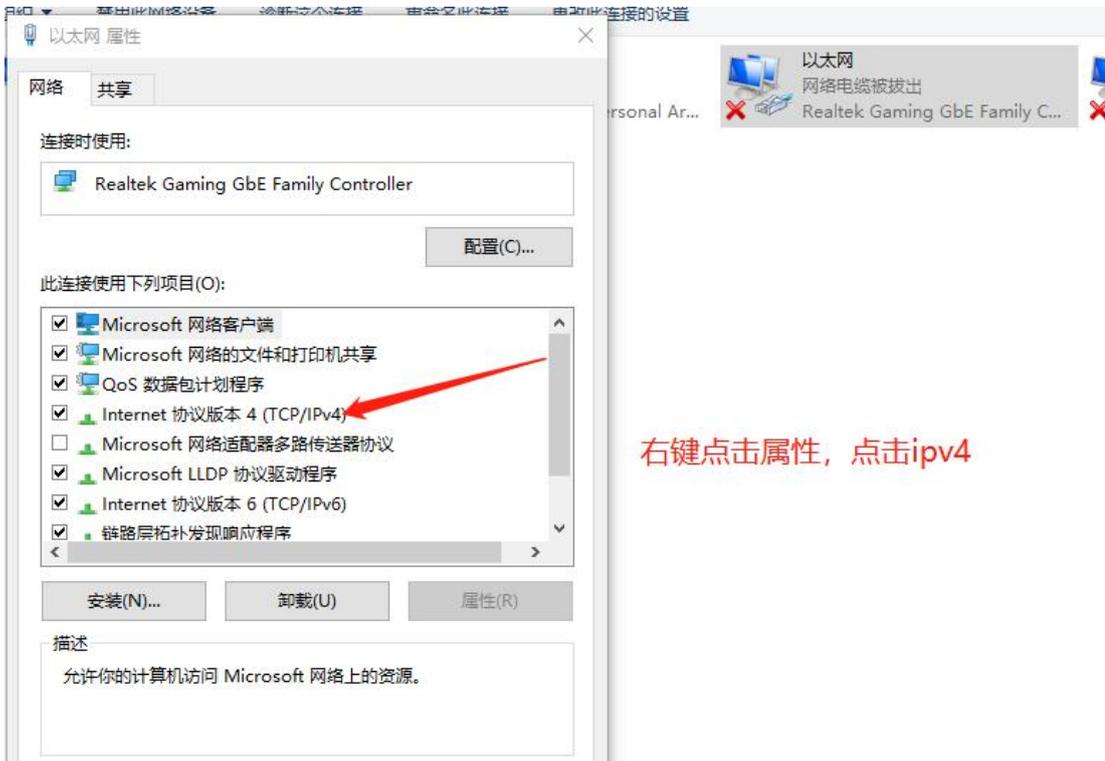

Click "IPV4"



Choose Use below IP address:

(U) 192.168.100.101

And(D) 255.255.255.0

Confirm.

And then back to computer browser, and input <https://192.168.100.100>